



## Adjusting paddle latches on steel C, M, S, SW, SLP & TC Series toolboxes

Adjust the paddle latches on steel C, M, S, SW, SLP or TC Series toolboxes when...

1. There is more than ¼" of play in the lid.
2. The lid is too tight.

The striker on steel toolboxes with lids is two-piece.  
Open the lid and loosen the nut on the striker plate bolt.



Pull the striker very slightly out (away from the lid) to loosen the lid

Or push in (toward the lid) to tighten the lid.



Tighten the nut on the striker plate bolt. Apply lithium grease to the striker and moving parts of the paddle latch.

For further assistance, contact technical support at RKI, Inc.