



## How to adjust a toolbox lid that is out of square

If the gap between the lid and the hull of the box is not consistent on the front and sides of the box when it is closed it can be adjusted using a common 2x4 piece of wood.



Insert the 2x4 under the lid in the front corner where the gap is too tight. Using the hull of the box as a brace, lightly push the board at the base so the lid moves out. It does not take much pressure to move the lid. Check the adjustment by closing the lid to make sure it is back in square.

If the gap between the lid and the hull of the box is not consistent along the front of the box from side-to-side it can be adjusted using a common 2x4 piece of wood.



Insert the 2x4 in between the lid & hull of the box in the front corner where the gap is shortest. Be sure to place the 2x4 in the corner over the welds. You may choose to cushion the board with a cloth to protect your paint. Apply light pressure down on the lid on the other end. It does not take much pressure to adjust the gap. Check the adjustment by closing the lid to make sure the gap is even from side-to-side.

For further assistance, contact technical support at RKI, Inc.